


Controller installation steps

Easy to install and easy to use

STEP 1 Open the middle lid and pack the battery

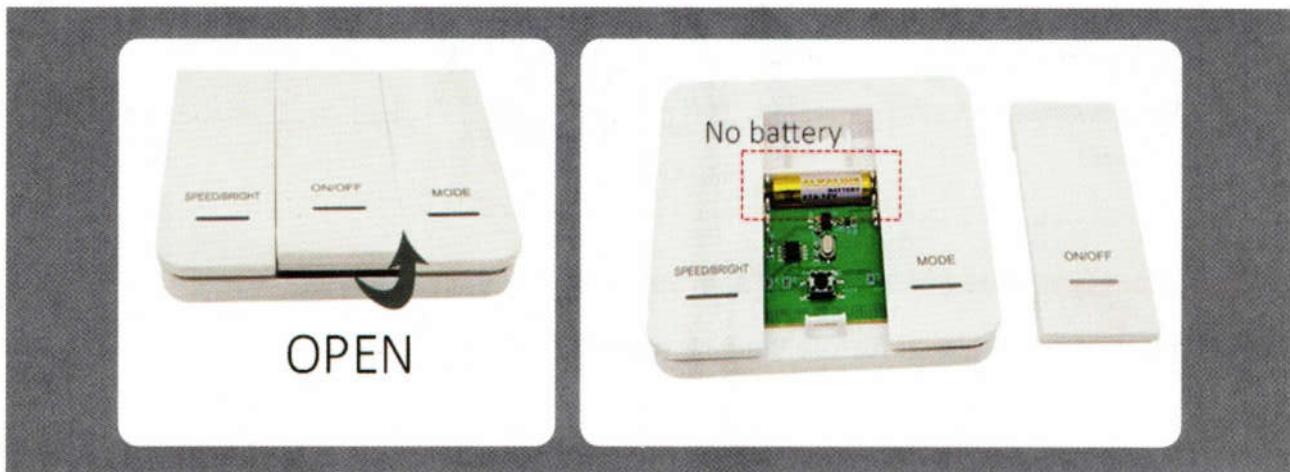

STEP 2 Stick double-side adhesive to the back of the remote control to the wall to make it easier to use




STEP 3 How to Increase the pixel of the controller ?

Step 1: Turn OFF the power supply.

Step 2: Long press "Mode" Keys 5 seconds, the lights will ON


Step 3: Press " Speed/Brightness" Key to increase the pixel points. till the whole lights are light on.

● SPEED/BRIGHTNESS ADJUSTMENT

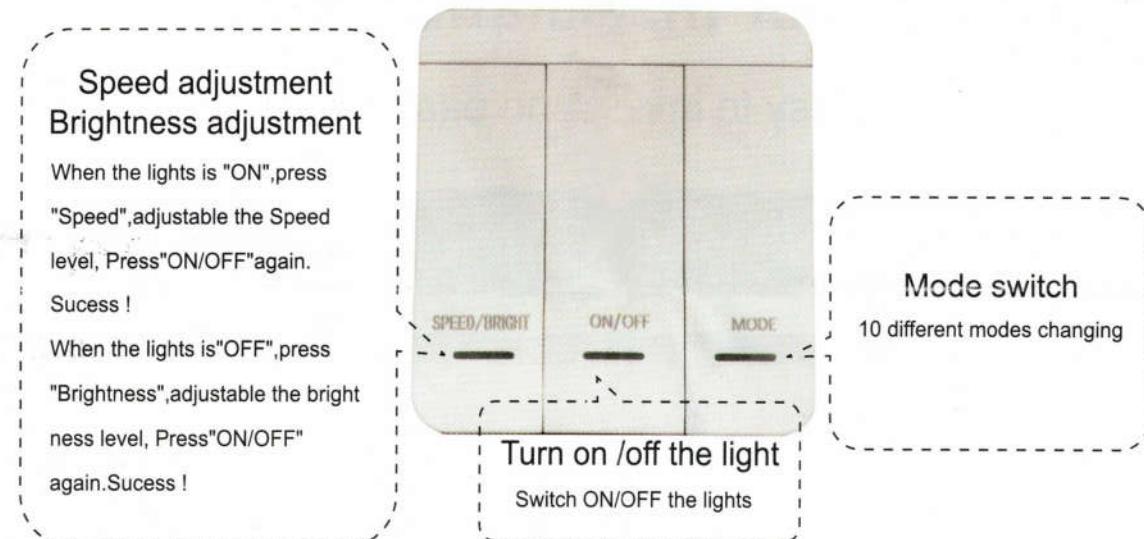

Reset function: press the "mode key" and "speed key" at the same time in the turn on light state to restore the factory default mode.

● WIRING DIAGRAM

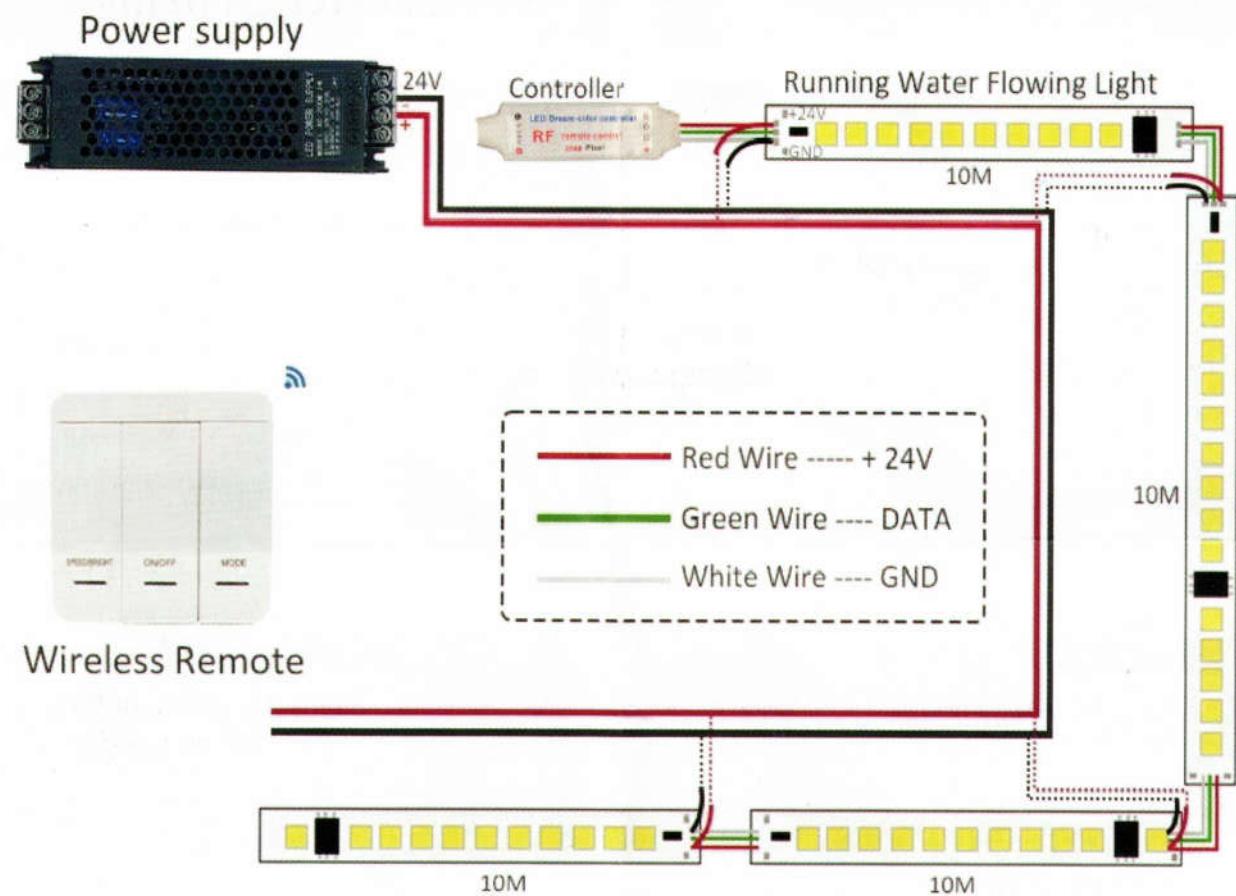



Meaningful Innovation.

Controller installation steps

Easy to install and easy to use

STEP 1 Open the middle lid and pack the battery



STEP 2 Stick double-side adhesive to the back of the remote control to the wall to make it easier to use




STEP 3 How to Increase the pixel of the controller ?

Step 1: Turn OFF the power supply.

Step 2: Long press "Mode" Keys 5 seconds, the lights will ON

Step 3: Press " Speed/Brightness" Key to increase the pixel points.
till the whole lights are light on.

● SPEED/BRIGHTNESS ADJUSTMENT

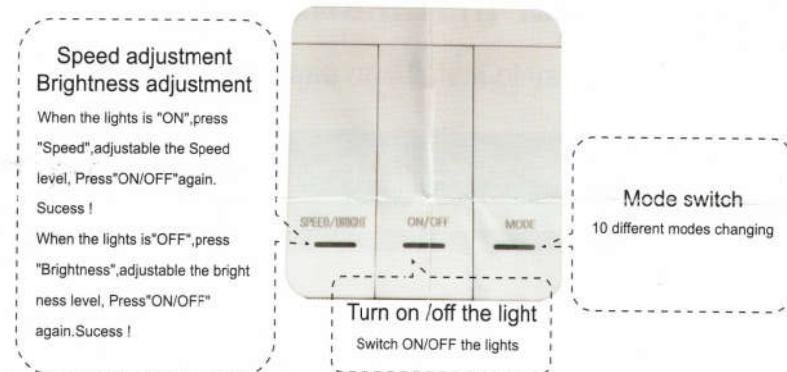

Reset function: press the "mode key" and "speed key" at the same time in the turn on light state to restore the factory default mode.

● WIRING DIAGRAM

